


MAKE SURE YOUR FIREARM IS UNLOADED BEFORE STARTING!



BUTTPAD INSTALLATION INSTRUCTIONS



- STEP 1** Remove buttplate
- STEP 2** Replace with spacer, fastening with (2) #6 x 1/2 screws
- STEP 3** Slide Rubber Buttpad over Spacer

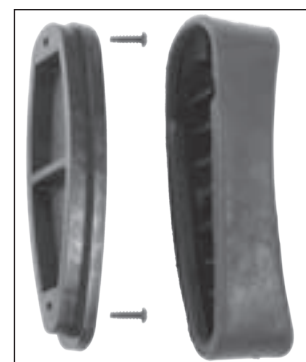

Other ATI Products for Hi-Point:

Hi-Point Stock Shown with Optional Accessories

Laser with Mount #HIP9100

9mm Carbine Replacement Stock #HIP9000

(2) Tactical Rails #HIP9200

Tactical Buttpad and Spacer #HIP9300

ATI Shotforce Components:

Pistol Grip Buttstock

**Mag Clamp
Mag Extension**

Heatshield

Marine Finish Heatshield with Ghost Ring Sights

Deluxe Heatshield with Ghost Ring Sights

Standard Forend

Moss/Rem/Win ShotForce Tactical Stock with Free ButtPad

Shotshell Holder

Top Folding Stock with Rear Pistol Grip

